


OE STYLE RUNNING BOARD FOR HYUNDAI CRETA/ IX25 2015

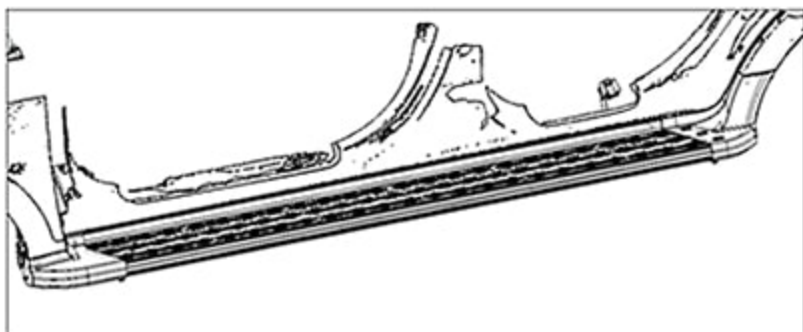












Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Parts list

No.	Qty	PIC.	No.	Qty	PIC.
Omno	2	 Running Board (L&R)	Omno	2	 Front Bracket
Omno	2	 Centre Bracket	Omno	2	 Rear Bracket(L&R)
Omno	8	 Plastic Cardφ10	○.6	8	 T-Bolt M10

INSTALLATION INSTRUCTIONS

Ошнб	8	 Spring Washer D10	Ошнб	8	 Big Washer D10
Ошнб	8	 Hex Nut M10	Ошнб	2	 Big Washer D8
Ошнб	2	 T-bolt M8	Ошнб	2	 Plastic Cardφ8
Ошнб	2	 Hex Nut M8	Ошнб	2	 Spring Washer D8
Ошнб	2	 Bolt ST6_12	Ошнб	2	 Hex Nut M6
Ошнб	2	 Bolt M6_16			

PIC

FRONT

0.16

ОШН

Only

Omni

○SHŌ

0.4

0.5


0.6

Q.5

Q.6

○ 10 ○ 11 ○ 12


INSTALLATION INSTRUCTIONS

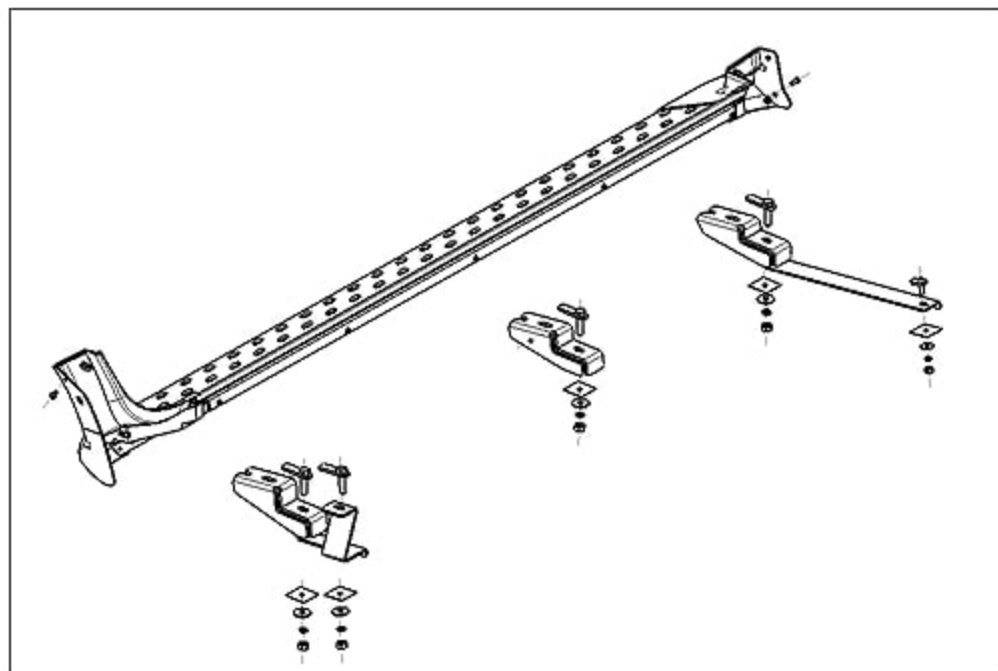

Installation step: (The installation of L&R side is the same.)

Step 1: Check all the contents are available in accordance with the above list.

Step 2: Remove the skid plate of vehicle and keep them.

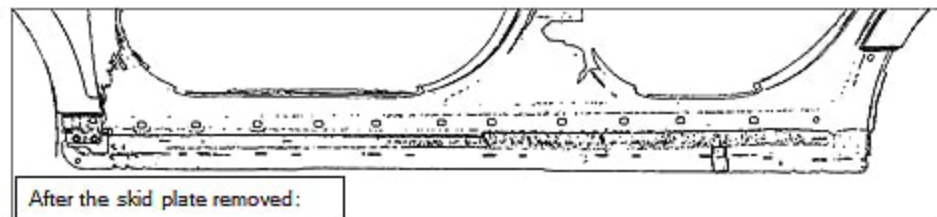

Step 3: Install bracket


1. Install front bracket

Find out the hole that install the front bracket as the picture shown, firstly put the plastic Card $\phi 8$ to T-bolt M8 and plastic Card $\phi 10$ to T-bolt M10 in order to avoid the bolt fall into the vehicle. Then install the T-bolt on the bottom of vehicle, then install the front bracket and lock the corresponding nut, but don't lock tightly.

INSTALLATION INSTRUCTIONS



T-bolt M8+Plastic Card $\phi 8$ +
Spring Washer D8
+Big Washer D8+Hex Nut
M8

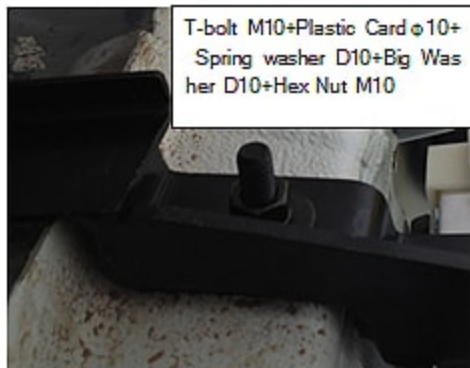

T-bolt M10+Plastic Card $\phi 10$ +
Spring washer D10+Big Was
her D10+Hex Nut M10

2. Install centre bracket


Find out the hole that install the centre bracket as the picture shown, firstly put the plastic Card $\phi 10$ to T-bolt M10 in order to avoid the bolt fall into the vehicle. Then install the T-bolt on the bottom of vehicle, then install the centre bracket and lock the corresponding nut, but don't lock tightly.

INSTALLATION INSTRUCTIONS



3. Install rear bracket


Find out the hole that install the rear bracket, firstly install the T-bolt on the bottom of vehicle, and install the rear bracket and lock the corresponding parts on the three hole as the picture shown, but don't lock tightly.

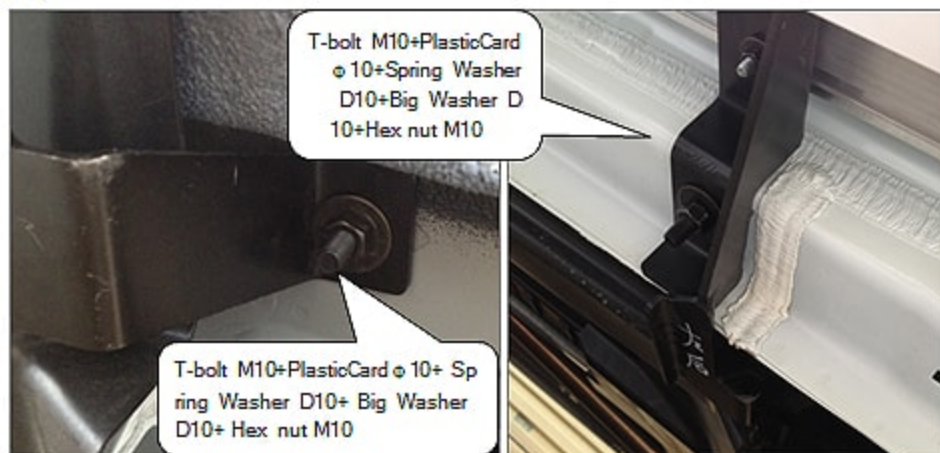


INSTALLATION INSTRUCTIONS

Step 4: Install running board

1. firstly remove the nut on the bottom of running board, then install the running board and push it to the right position as below picture.

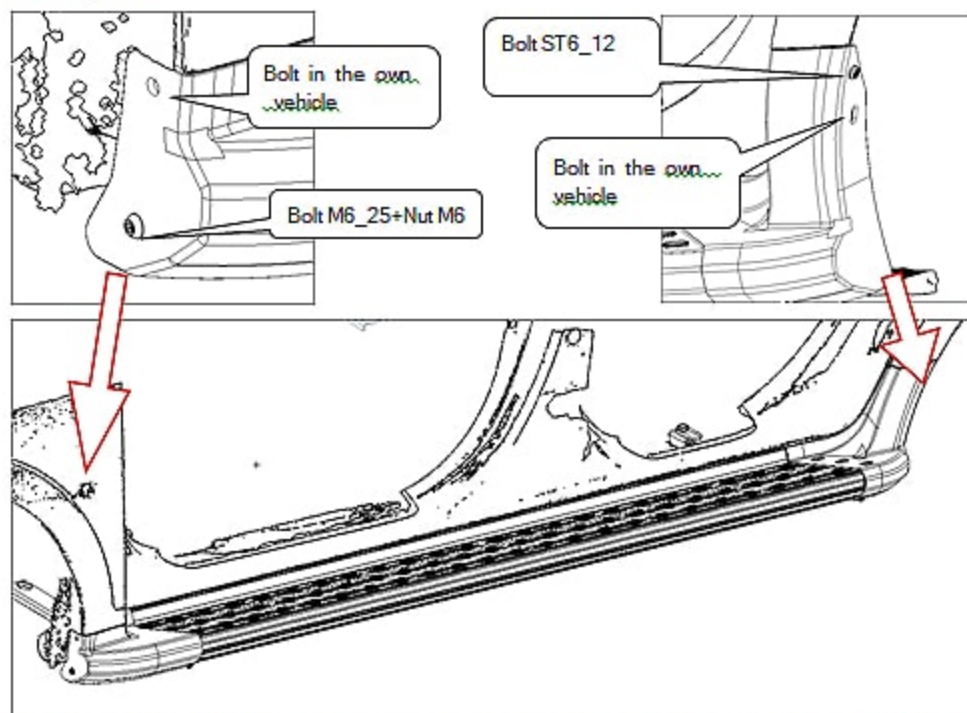

2. install the nut on the bottom of the running board, then adjust it to right position and lock all the bolt of the bracket tightly as below picture.

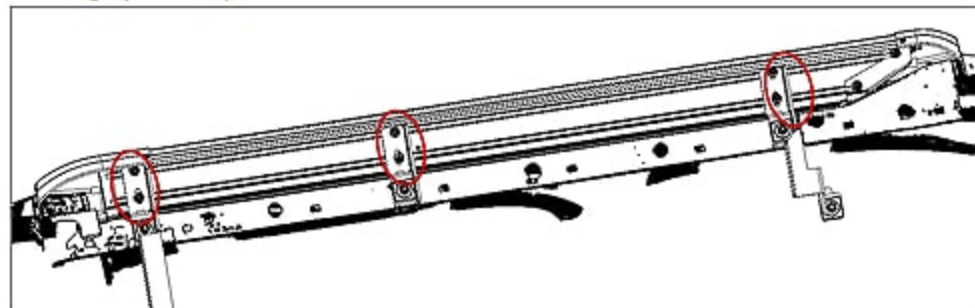

Step 5: Check the running board if it install correctly, then tighten all the hardware, pick up all the tools and Installation finished

INSTALLATION INSTRUCTIONS

Note:

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.