



**WINBO**  
改 SUV 就 选 威博



[www.winbo4x4.com](http://www.winbo4x4.com)






## Factory Code: PW00520705 PW00520706 OE STYLE RUNNING BOARD FOR HUY TUCSON 2015+

### NOTICE:

- ≡ All pictures of this instruction only for reference; regarding to the same installation the final received products might have different with the picture.
- ≡ For your convenient, please read the detail as following instruction in order to protect the surface and prevent the scratch damage from installing process.
- ≡ Please periodically check and retighten all the hardware for keeping safe.



### PARTS LIST:




NO	QTY	PICTURE	NO	QTY	PICTURE
①	2	 RUNNING BOARD (symmetrically)	②	6	 BRACKETS
③	6	 SPRING WASHER D8	④	6	 T-bolt No. 5 M10
⑤	6	 LARGE WASHER D8	⑥	6	 NUT M8
⑦	6	 HEX BOLT M8_20	⑧	6	 HEX BOLT M8_25




**WINBO**  
改SUV 就是玩博



[www.winbo4x4.com](http://www.winbo4x4.com)


⑨	6	 LARGE WASHER D10	⑩	6	 NUT M10
⑪	6	 HANGER			

Step of installation (INSTRUCTION IS UNIVERSAL FOR BOTH SIDE, HERE BY DESCRIPTION ONLY FOR ONE SIDE.)

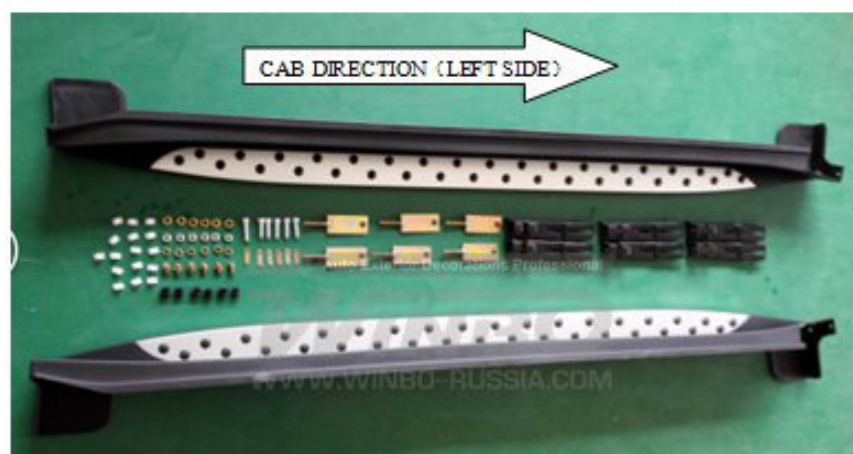

Step 1: Check all the accessories refer to the instruction.

Step 2: Take off the side skirt and Put the hanger onto the side skirt. (as bellow photo)

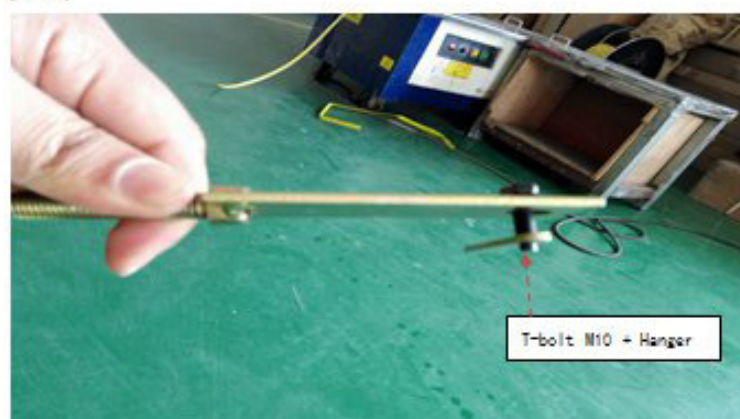



**WINBO**  
改SUV 就是锐搏



[www.winbo4x4.com](http://www.winbo4x4.com)



The distance for each Bracket with hanger against to the head skirt should be 34.5cm/105cm/159cm (as above photo).

Step 3: Attach all brackets onto the side skirt with hanger and lock them up with HEX BOLT M8\_25 as bellow photo. (Be aware to not fasten them temporary.)





**WINBO**  
改SUV 就是锐搏



[www.winbo4x4.com](http://www.winbo4x4.com)

Step 4: Adjust those brackets to perfect position(as bellow photo).



Step 5: Assemble Hex bolt M8\_25 with Large washer M8, spring washer M8, Nuts M8 together as bellow photo and install them into the running board.



Step 6: Adjust the balance of the running board on both side and attach the body along with the brackets into the side skirt. (Be aware to take off the bolts and nuts from the running board before installing as bellow picture).







**WINBO**  
改SUV 就是锐搏



[www.winbo4x4.com](http://www.winbo4x4.com)

Step 7: After the running board has been attached to the side skirt; use those bolts and nuts from the running board to lock up the body with brackets (as bellow picture) ; Adjust the balance of the body to perfect position and then fasten those bolts to finished installation.



Step 8: Check all bolt weather they has been fasten; Packing up and installation completed.

Disclaimer: Any damages and losses caused by improper installation and application, goes beyond our quality warranty.

**WINBO**  
WWW.WINBO-RUSSIA.COM