

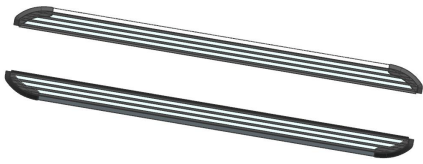


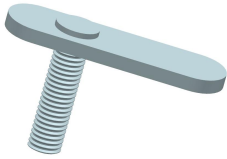
19+ VW Touareg Normal Side Step Installation Instructions

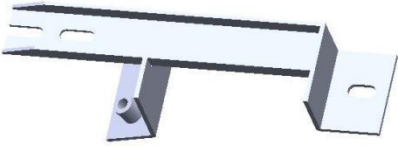
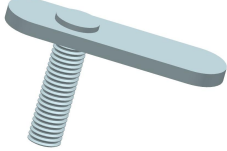




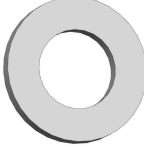
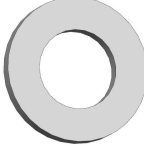
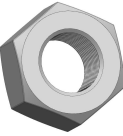
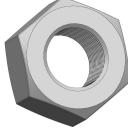
Bracket installation instructions

一. Precautions

- 1.. All pictures in this manual are for reference only. The pictures may be different from the actual objects. The installation method is the same.
2. In order to facilitate your installation, please read the product instruction manual carefully before installation. During installation, you need to protect the surface of your car to avoid scratches.
3. Regularly check whether all accessories connected to the car are loose to ensure safe use.

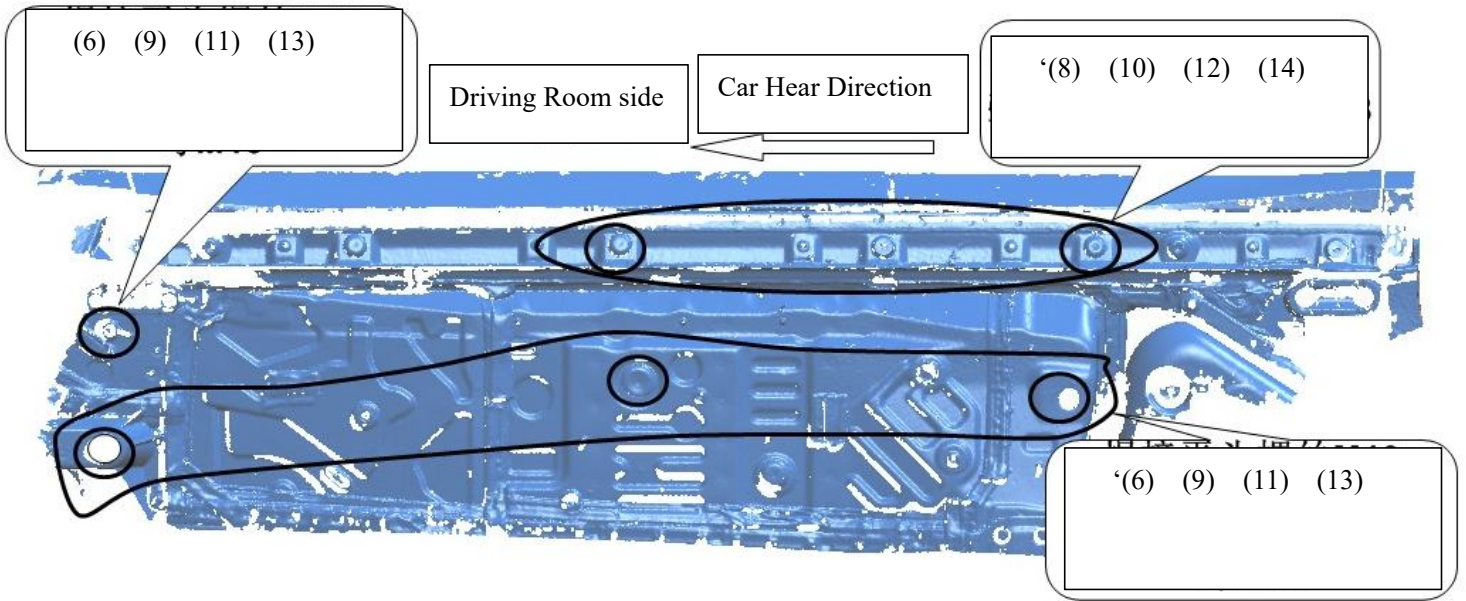
二. Parts List

#	Accessories	qty	#	Accessories	Qty
(1)	 Pedal (left and right symmetry)	1	(2)	 Rear bracket (left and right symmetry)	2
(3)	 Front bracket (left and right symmetry)	2	(4)	 Welding flat head screw M10 (68*20*20)	6

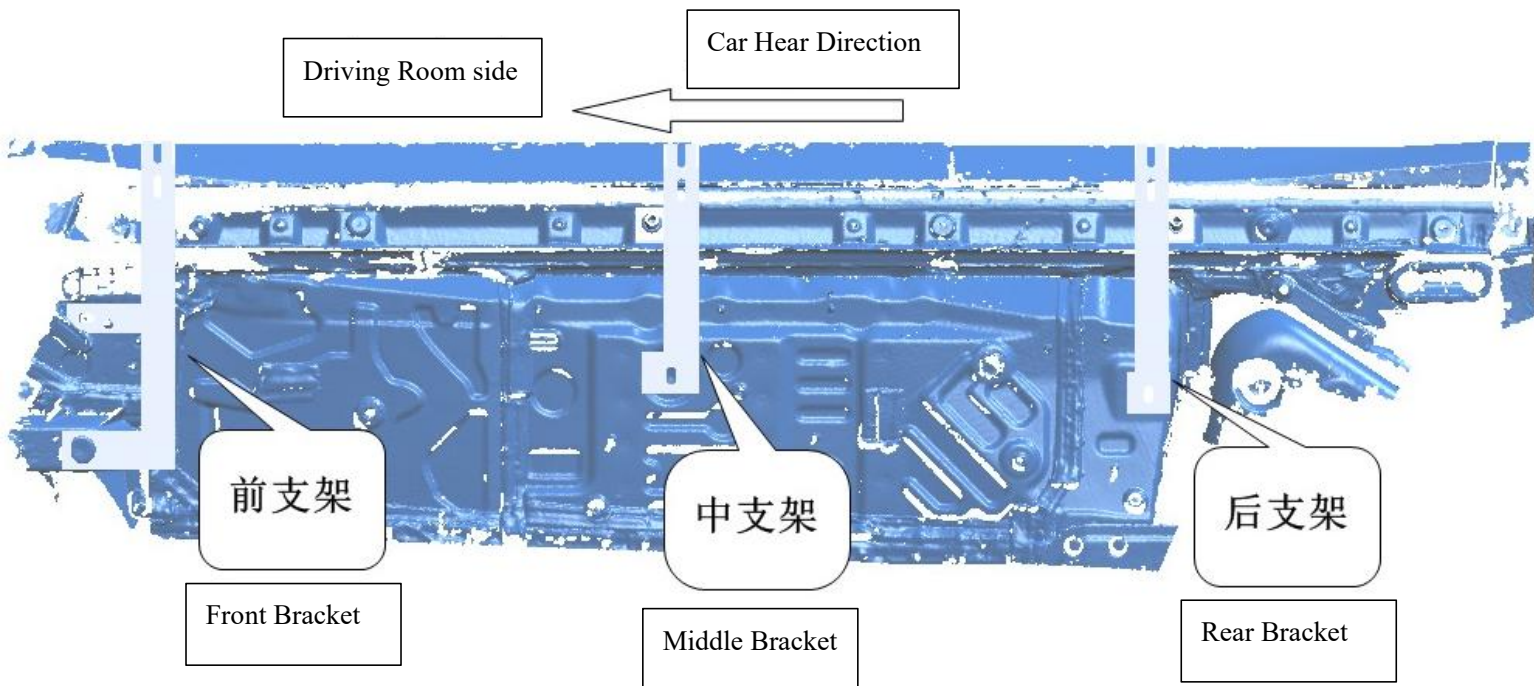
(5)	 <p>Middle bracket (left and right symmetry)</p>	2	(6)	 <p>Welding flat head screw M10 (52*14*12.5)</p>	8
(7)	 <p>External hexagonal screw M8X2 0</p>	1 2	(8)	 <p>Hook screw M8</p>	4
(9)	 <p>Spring gasket Ø 10</p>	8	(10)	 <p>Spring gasket Ø 8</p>	1 6
(11)	 <p>Flat gasket D10</p>	8	(12)	 <p>Flat gasket D8</p>	1 6
(13)	 <p>External hexagon nut M10</p>	8	(14)	 <p>External hexagon nut M8</p>	4

三. **Installation steps and methods** (the installation methods on the left and right are the same, only the installation method on one side is described now)

(1) **Bottom mounting hole location map:**

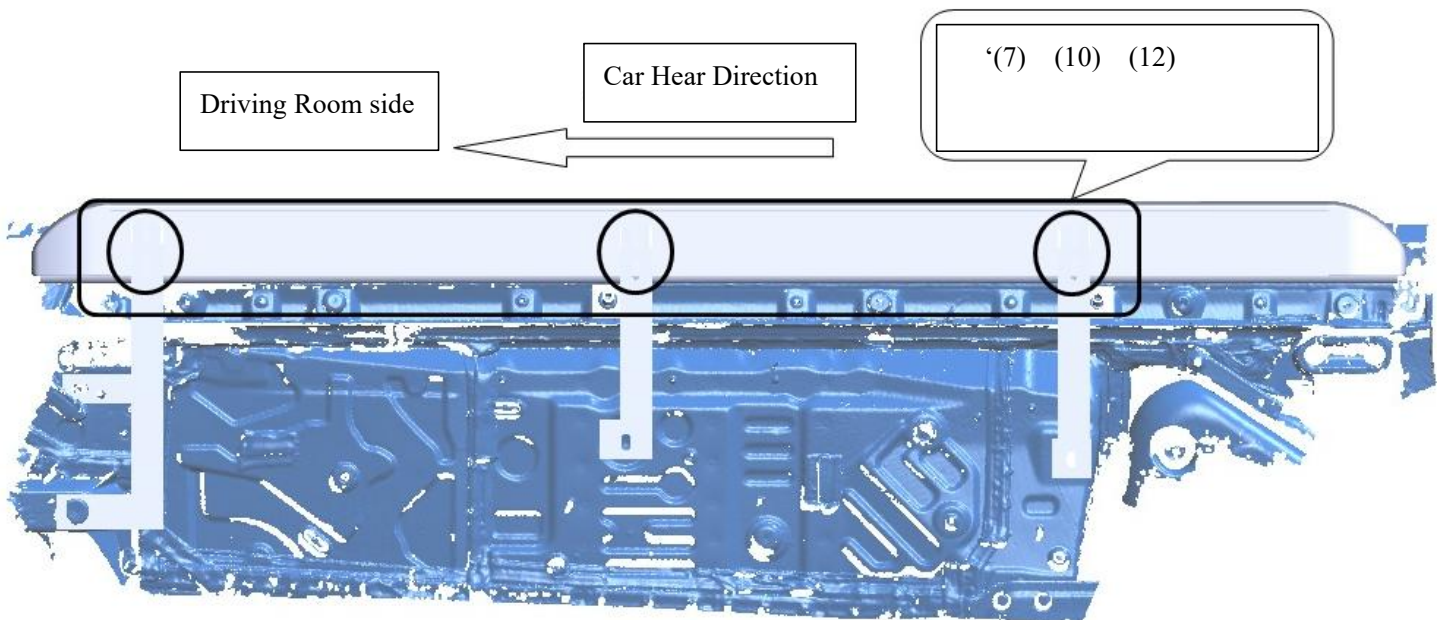


(2) Install the fixed bracket: first remove the original car guard plate, remove the corresponding screw and rubber plug of the original car, then place welding flat-head screws in the corresponding holes, and install the corresponding bracket into the car and lock it (the left and right installation methods are the same)



(3) Install the pedals (the left and right installation methods are the same)

After the installation of the fixed bracket is completed, place the pedal on the fixed bracket bracket and tighten it with M8 external hexagonal screws, D8 flat washers and D8 elastic washers at the upper holes.



Four. pedal test

1. Visually check whether it is parallel to the car body.
2. After confirming that the pedal is completely OK, don't forget to check that the nut on the pedal is fully tightened. After the nuts are completely tightened, reinstall the original car guard plate. If there is interference between the bottom guard plate and the pedal bracket, please trim the

interference area between the bracket and the original car guard plate to ensure that the original car guard plate is reinstalled smoothly. Once the installation is completed, you can experience the brand-new visual effects and convenience of getting on and off the vehicle after modification.